

Rubbermaid® Premier™

7H74, 7H75, 7H76, 7H77, 7H78, 7H79, 7K75, 7K54, 7K11, 7J12

NEW Rubbermaid Premier™ is made with Tritan™, a type of plastic that resists stains and odors. Plus, Premier™ containers have Flex & Seal™ lids that are easy to seal and remove. Part of the Easy Find Lids™ system, Premier™ lids snap to bases and other lids for easy organization and graduated sizes nest together to take up less room in your cabinets.



Care & Use

To keep your new containers looking their best, we recommend the following:

- Remove label and wash before use.
- Use care when handling container with hot contents or after reheating in the microwave.
- Made of microwave safe materials that can be used to reheat foods to a temperature comfortable for eating. These containers are not intended for cooking.
- Follow your microwave manufacturer's recommendation when defrosting or reheating foods.
- Excessive reheating or heating time may damage the container. Remove lid when in microwave to avoid dangerous steam build-up.
- To avoid pitting, do not reheat food high in salt, oil, fat, sugar or tomato.
- Premier is designed to resist stains from tomato based foods.
- Reheating foods containing curry seasoned with the herb turmeric may stain the containers.
- Do not use in conventional oven, under browning elements or on stovetop.
- This item is made of materials that are safe for normal household dishwashers. Be sure that the item is secured so that it does not come in contact with the dishwasher element to avoid melting.
- This item is made of materials that are safe for freezer use. Please note that plastics are less flexible when cold or frozen and may break if dropped.
- Snap the bottom of the base to the top of the lid for easy storage and organization.