



Rubbermaid®

Rubbermaid® Premier™

7N69, 7H74, 7H75, 7H76, 7H77, 7N70, 7H78, 7H79, 7K75, 7K54, 7J11, 7L96, 7P11

Rubbermaid Premier™ is made with Tritan™, a type of plastic that resists stains and odors. Plus, Premier™ containers have Flex & Seal™ lids that are easy to seal and remove. Part of the Easy Find Lids™ system, Premier™ lids snap to bases and other lids for easy organization and graduated sizes nest together to take up less room in your cabinets.



Care & Use

To keep your new containers looking their best, we recommend the following:

- Remove label and wash before use.
- Use care when handling container with hot contents or after reheating in the microwave.
- Made of microwave safe materials that can be used to reheat foods to a temperature comfortable for eating. These containers are not intended for cooking.
- Follow your microwave manufacturer's recommendation when defrosting or reheating foods.
- Excessive reheating or heating time in the microwave may damage the container. Remove lid (may place loosely on top to prevent splattering) to allow steam to vent when microwaving. Sealing plastic lids while heating may create extra pressure causing the lid to melt, warp, or create excessive steam build up.
- Avoid using plastic wrap inside or on top of the container during microwave use. The plastic wrap could heat, melt and adhere to the container walls.
- To avoid pitting, do not reheat food high in salt, oil, fat, sugar or tomato.
- Premier is designed to resist stains from tomato based foods.
- Reheating foods containing curry seasoned with the herb turmeric may stain the containers.
- Reheating and/or melting foods with high sugar content (i.e. chocolate, candies, jelly) could lead to severe damage and potentially melt the container.
- Do not use in conventional oven, under browning elements or on stovetop.
- This item is made of materials that are safe for normal household dishwashers. Be sure that the item is secured so that it does not come in contact with the dishwasher element to avoid melting.
- This item is made of materials that are safe for freezer use. Please note that plastics are less flexible when cold or frozen and may break if dropped. Also note that water expands when frozen, so when filled to capacity the container could expand and crack.
- Do not use utensils with sharp edges (i.e. knives) in the container, as they could scratch or scuff the container surface.
- Snap the bottom of the base to the top of the lid for easy storage and organization.