



	Description	Assem	nbly	Letter Quantity
Г	Handle Kit		QQ	111
1	Handle	and the second second second	H1	1000
	Swivel Latch		H2	1
Doors	Top Cable		H3	1000
lä	Bottom Cable		H4	1
	Countersunk Screw		H5	2
	Spring Bolt Kit		SS	, 1
	Spring Bolt	V- 141 - 1	S1	2
1	Strike Plate		S2	1
1	Round Head Screw		S3	10



HANDLE ASSEMBLY INSTRUCTIONS

- Pre-Assembly:
 Review ALL assembly steps before beginning construction.
 Open the HANDLE KIT (QQ) and SPRING BOLT KIT (SS) and make sure that no parts are missing.

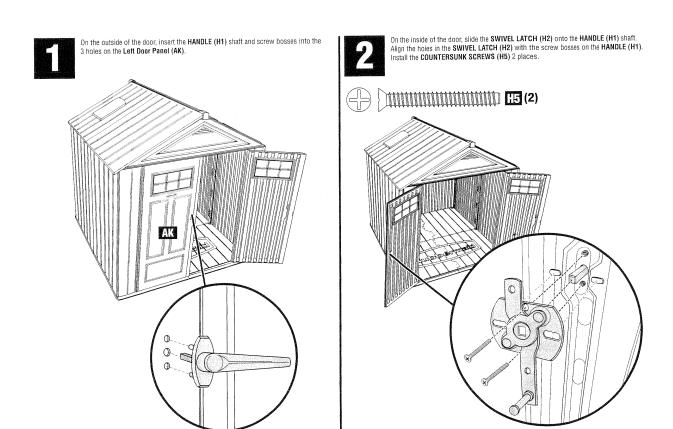


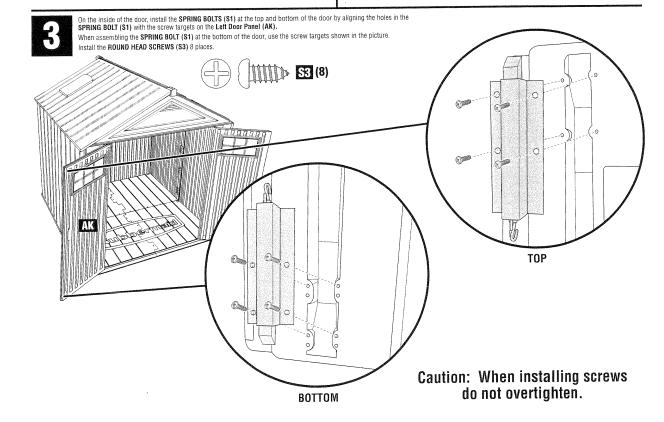

Connect the TOP CABLE (H3) by inserting the "z-hook" end into the hole at the top of the SWIVEL LATCH (H2) and rotate into position.

Push down on the top SPRINGE BOLT (S1) and attach the loop on the TOP CABLE (H3) to the s-hook on the SPRING BOLT (S1).


Crimp the s-hook closed with a pair of pliers.

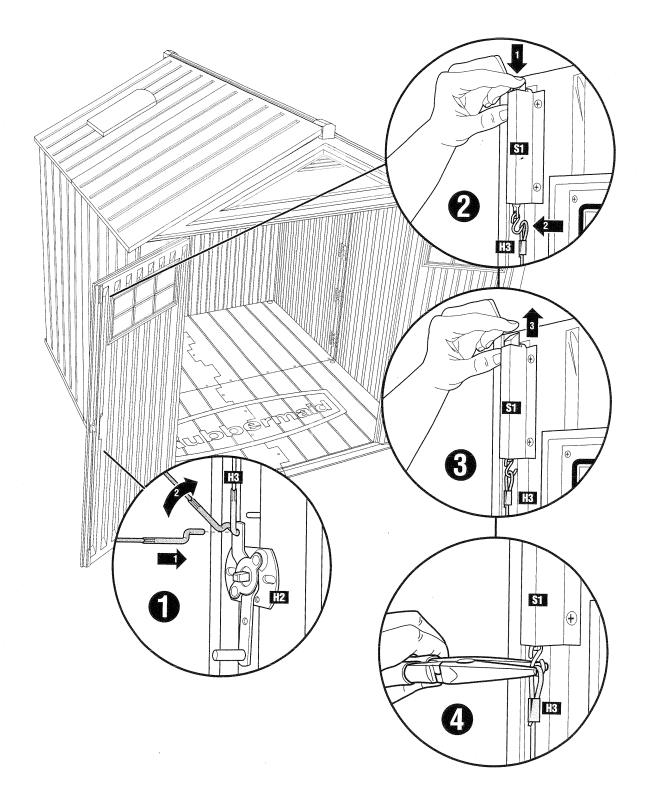



Connect the **BOTTOM CABLE** (**H4**) by inserting the "z-hook" end into the hole at the bottom of the **SWIVEL LATCH** (**H2**) and rotate into position.

Push up on the bottom **SPRING BOLT** (**S1**) and attach the loop on the **BOTTOM CABLE** (**H4**) to the s-hook on the **SPRING BOLT** (**S1**).

Crimp the s-hook closed with a pair of pliers.

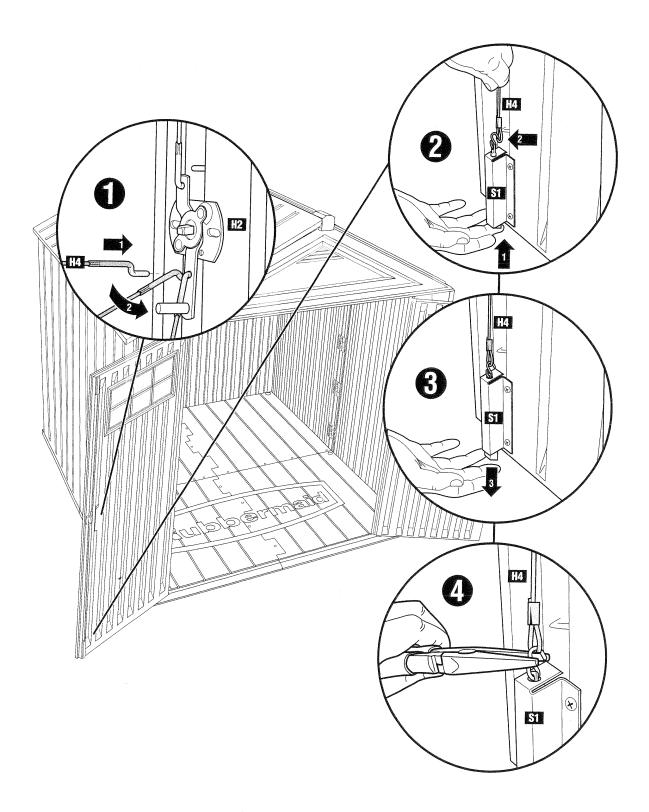

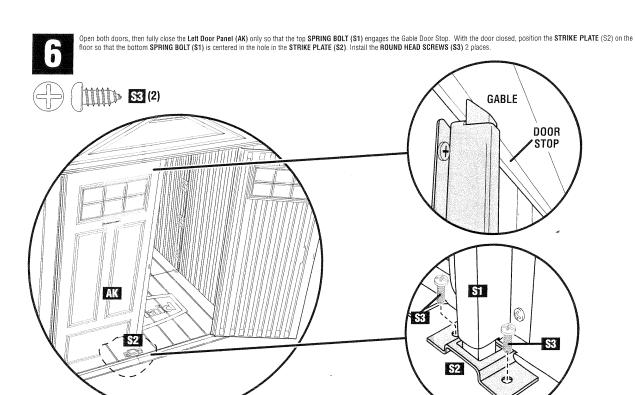

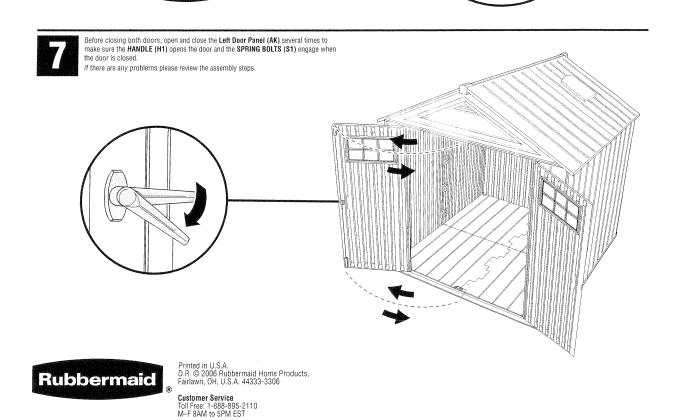

A **Newell Rubbermaid** Company

or visit us at www.rubbermaid.com

L8-3784-H0